



5 Dimensions

5.1 Depth


5.1.1 24 Volt Push Buttons

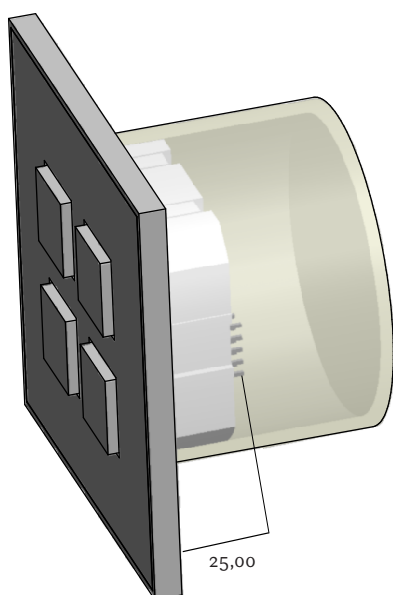

5.1.2 250 Volt Push Buttons

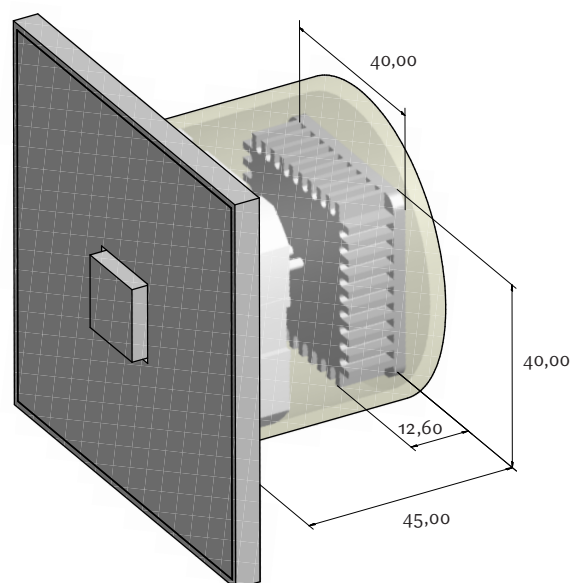

5.1.3 KNX

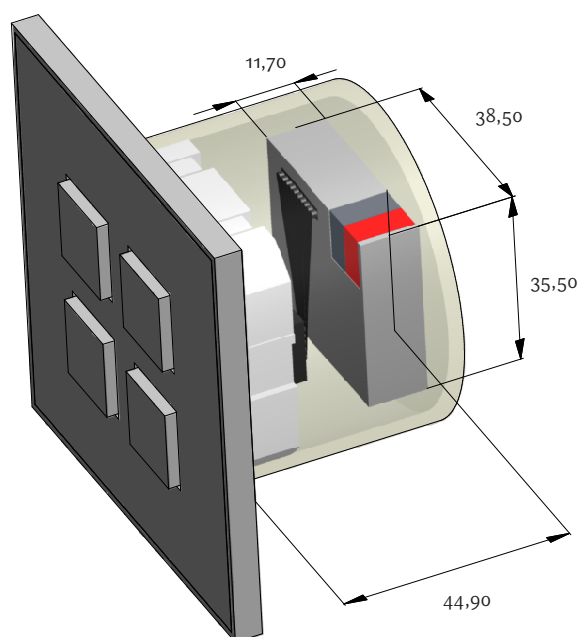


5 Dimensions


5.2 Single frame

5.2.1 SB1T

Identical for following products : SB1T, SB2T, SB3T, SB4T, SBMG, SBQLW, SBQLB, SQLITE, SBB2M, SBXT

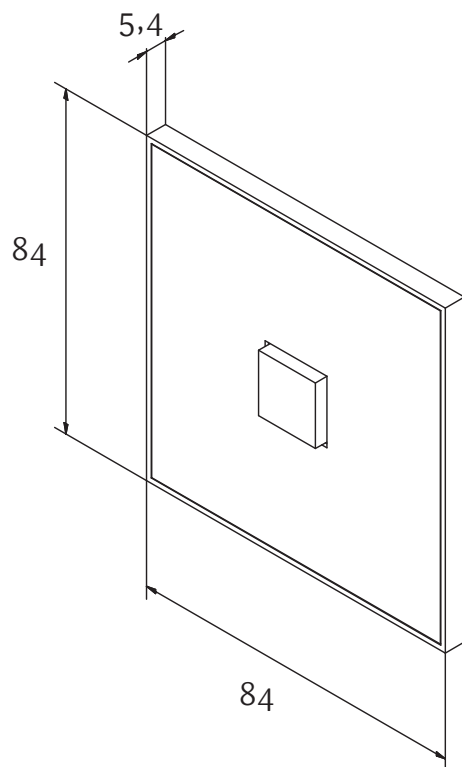

5.2.1 SBMK + SBETP

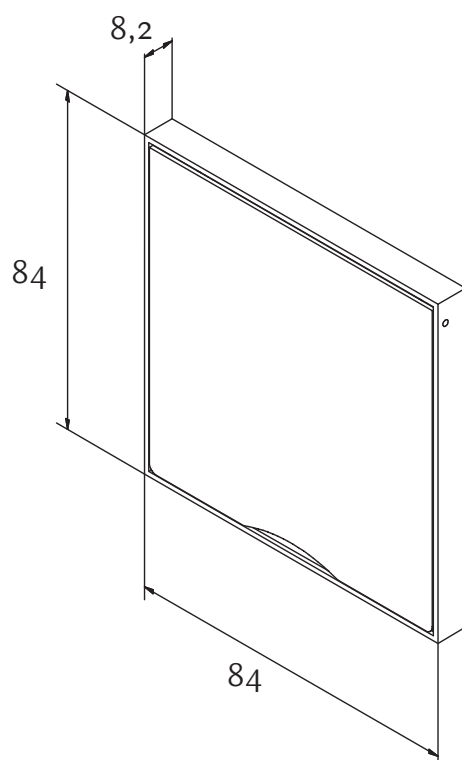


5 Dimensions

5.2 Double frame


5.2.1 SB44T

Identical for following products : SB11T, SB22T, SB44T, SB42T, SBMMG, SB1TMG, SB2TMG, SB4TMG, SBB22M, SB3MT, SB4MT

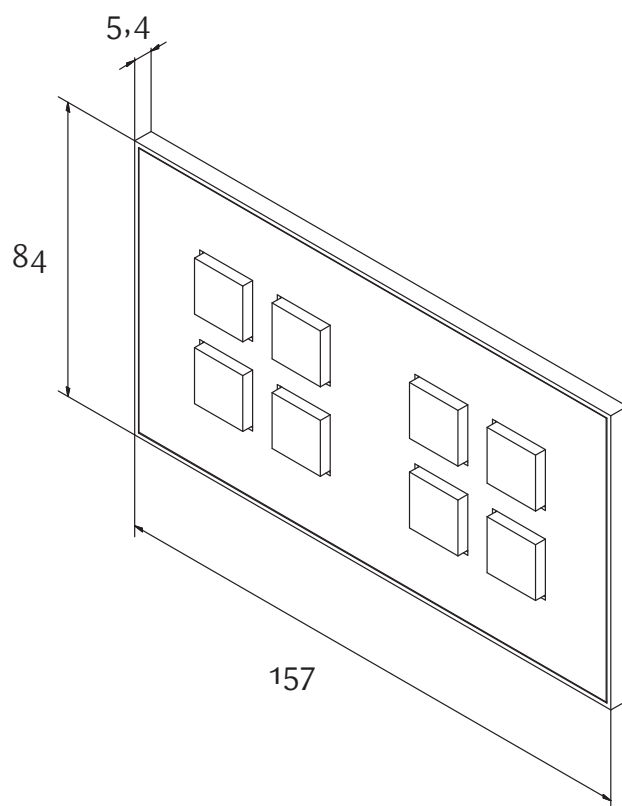

5.3 Triple frame

5.3.1 SBMMMGG

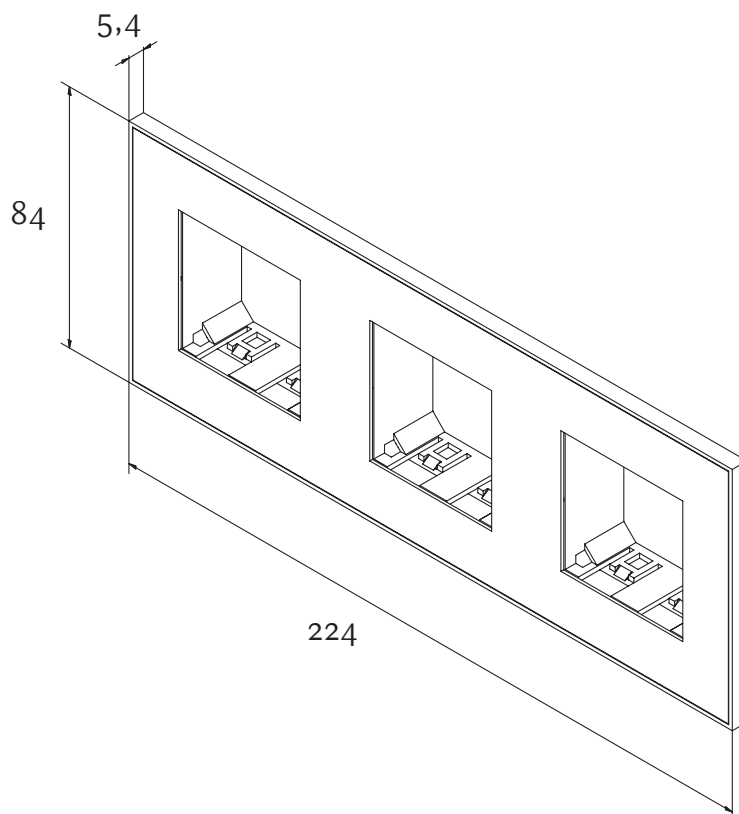


6 Wall Boxes

6.1 Dimensions


Lithoss switches and sockets should be installed on wall boxes with screws (screw distance : 60mm)
Below you find an overview of our wall boxes.

A recent adaptation of the mounting frame has made it possible to install Lithoss products on the KAISER wall boxes (dia 59mm instead of 61mm). See the overview on page 30.


RE0119

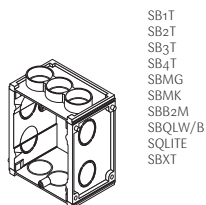


RE0120

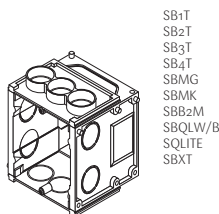


2 x RE0120

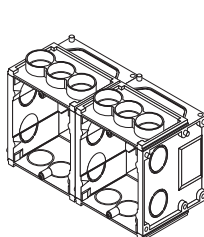


3 x RE0120

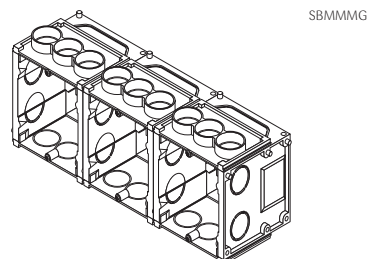


RE1265

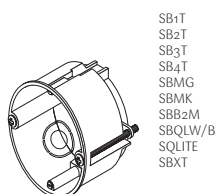


RE1266

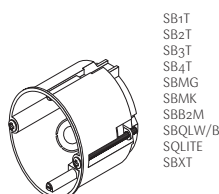


1 x RE1267

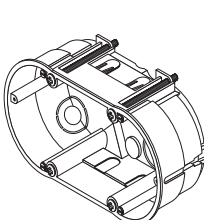

1 x RE1267 + 1 x RE1266

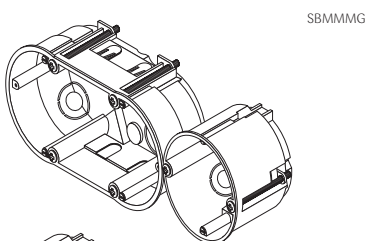


3 x RE1266

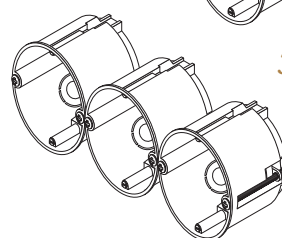


IMPORTANT DISTANCES


INSTALLATION
SINGLE PLATES

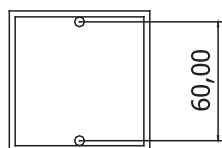


INSTALLATION
DOUBLE PLATES

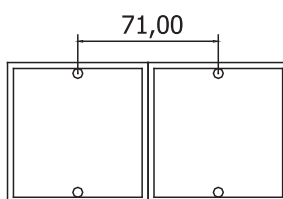

INSTALLATION
TRIPLE PLATES

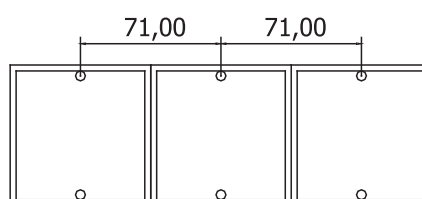

INSTALLATION OF 3 x SINGLE PLATES

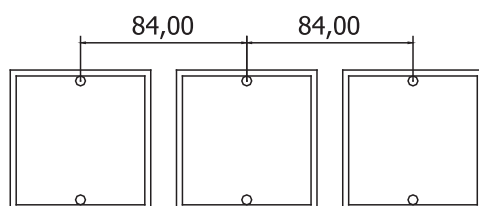

INSTALLATION OF 2 x DOUBLE PLATES

